RVA6104

Bathtub Popup Drain

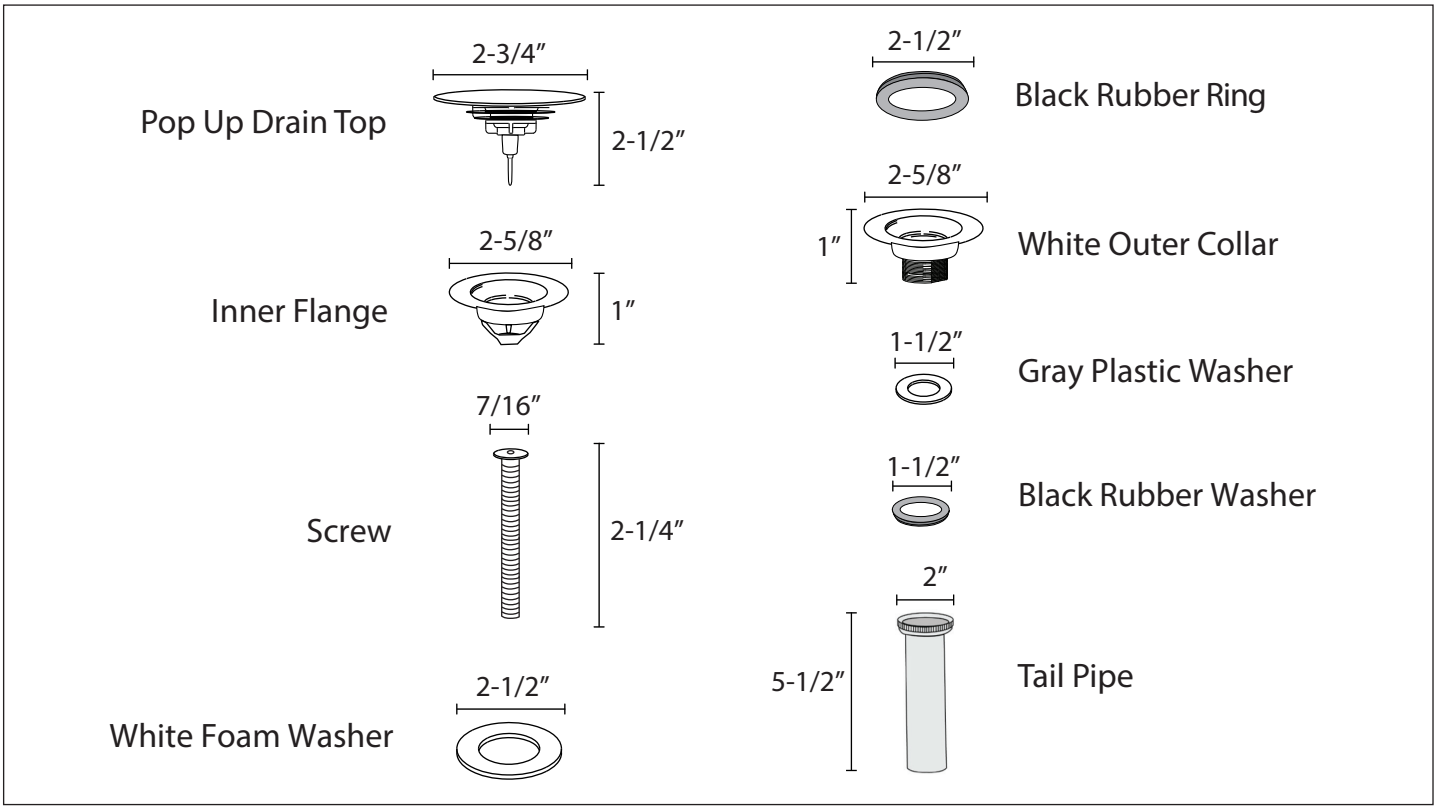

INSTALLATION GUIDE

Note: This pop-up drain assembly connects your tub to your floor plumbing. You will need to prepare your floor plumbing properly, or have a rough-in kit in place on the floor. We recommend the OS&B Freestanding Tub Rough-in.

1. Lay the tub on its side. Have some blankets on the floor to prevent damage to the sides of the tub.
2. Insert the **Inner Flange** and **White Foam Washer** through the top of the tub's drain opening.
3. From under the tub, place the **Black Rubber Ring** and **Outer Collar**.
4. Insert the **Screw** from inside the **Inner Flange** and screw all the way into the **Outer Collar**. Tighten fully with a flat head screwdriver.
5. Attach the **Tail Pipe** to the bottom of the **Outer Collar** (make sure you have the **Grey Plastic Washer** and the **Black Rubber Washer** in place) and tighten fully with your hand. The **Tail Pipe** should now be tightly connected and not move if you try to twist by hand.
6. Push the **Popup Drain Top** into place.
7. Follow the instructions for your floor plumbing rough-in kit. The **Tail Pipe** of the drain assembly will slide into your floor rough-in.

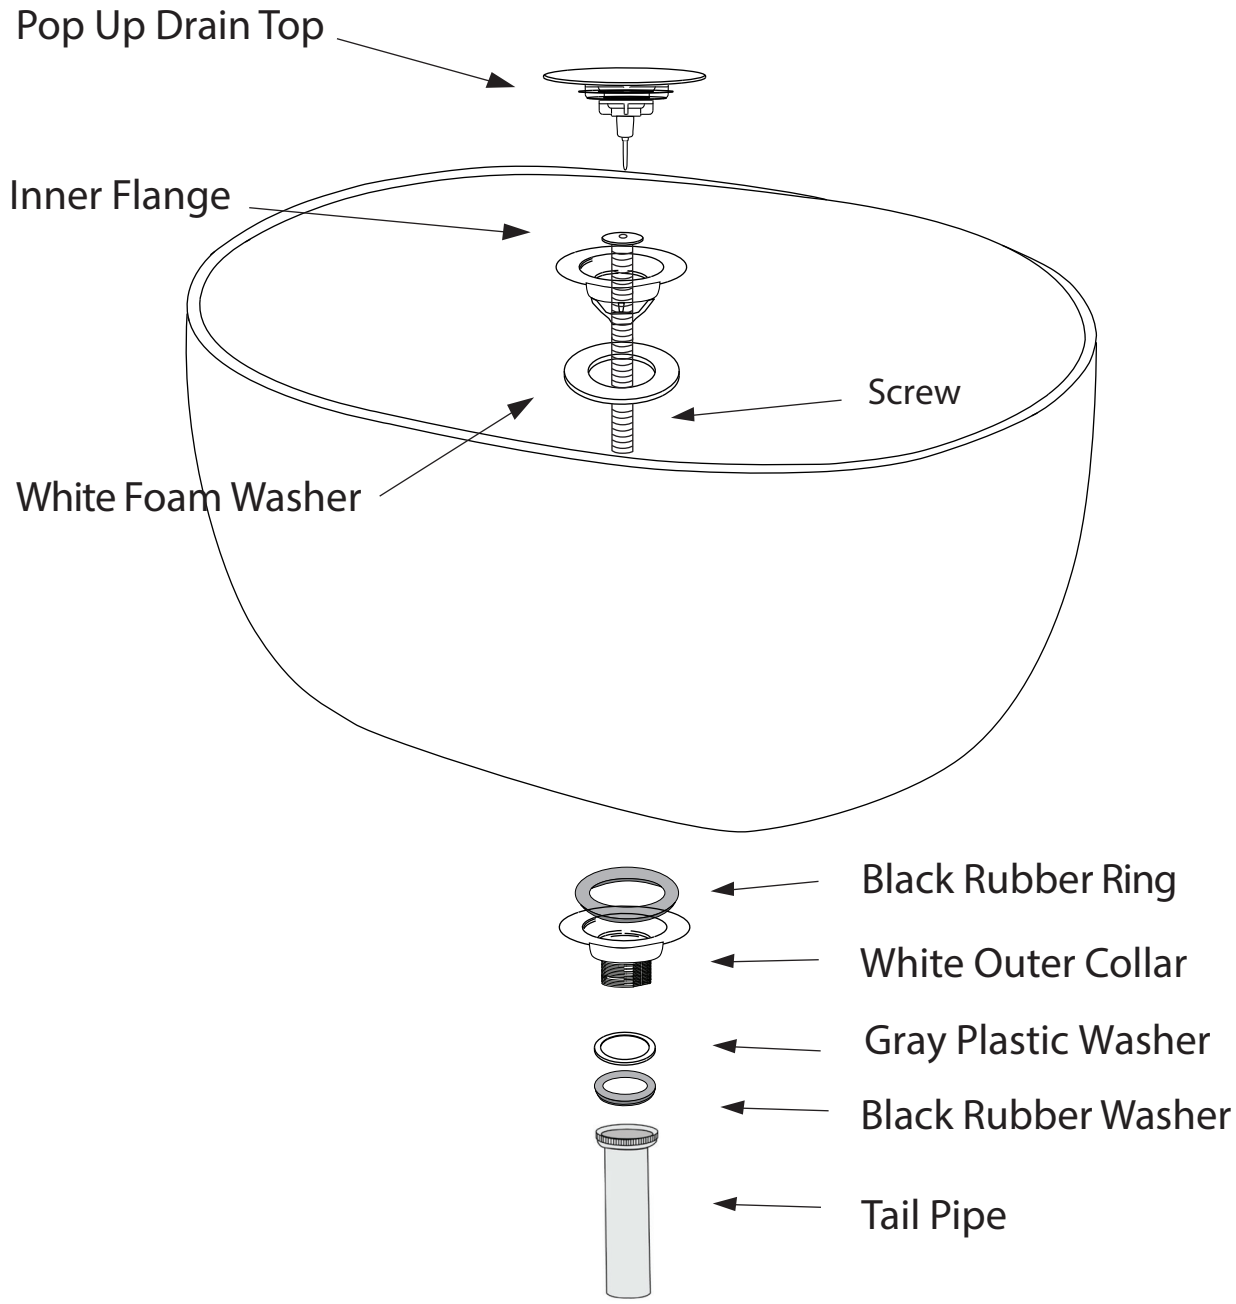

cUPC certified by IAPMO to meet US and Canada plumbing standards.
Codes compliance: ASME A112.19.3/CSA B45.4

RUVATI®
Address: 2705 Meister Pl, Round Rock, TX 78664
USA Phone: 1.855.478.8284
Email: support@ruvati.com